
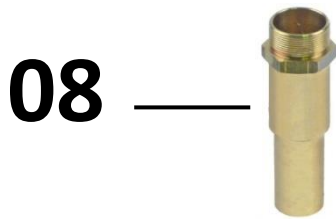
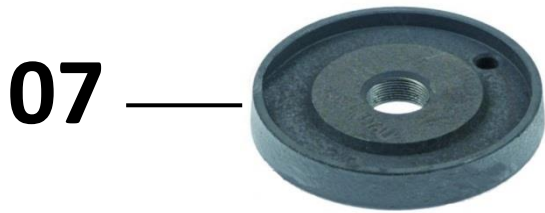
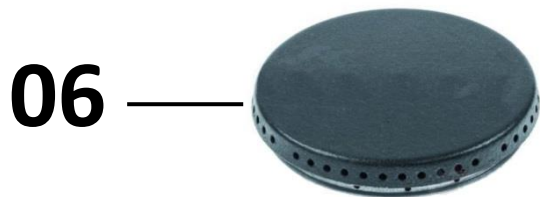


HENDI COOKERS: GAS AND ELECTRIC

n°	ARTICLE	DESCRIPTION
01	012817010	Cast iron pan support
02	012817008	Thermocouple 600mm
03	012817002	3,5 KW Burner Lid
04	012817001	3,5 KW Burner Body
05	012817003	3,5 KW Venturi mixing tube
06	012817005	6 KW Burner Lid
07	012817004	6 KW Burner Body
08	012817006	6 KW Venturi mixing tube
09	012817013	Nozzle Ø 1,40 for 3,5KW (Methane - Europe)
	012817014	Nozzle Ø 1,85 for 6KW (Methane - Europe)
	012817015	Nozzle Ø 0,92 for 3,5KW (30MBAR LPG - Europe, no DE,AT,CH)
	012817016	Nozzle Ø 1,20 for 6KW (30MBAR LPG - Europe, no DE,AT,CH)
	012817017	Nozzle Ø 0,80 for 3,5KW (50MBAR LPG - DE, AT, CH)
	012817018	Nozzle Ø 1,05 for 6KW (50MBAR LPG - DE, AT, CH)
	012817019	Nozzle Ø 1,30 for 3,5KW (Methane - DE L + HU)
	012817020	Nozzle Ø 1,70 for 6KW (Methane DE L + HU)
	012817021	Nozzle Ø 1,45 for 3,5KW (G25 Methane - The Netherlands)
	012817022	Nozzle Ø 1,90 for 6KW (G25 Methane - The Netherlands)
10	012817009	Nozzle holder
11	012817035	Gas tap for 3,5KW (since May 2016)
12	012817036	Gas tap for 6KW (since May 2016)
14	012807081	Black knob for gas tap with grey label (since May 2016)
16	012817042	Spark Plug for cast iron burners (600mm) (only for electric ignition!)
17	012837002	Ignition box (4 exits) (only for electric ignition!)
18	012837001	Ignition box (6 exits) (only for electric ignition!)
19	012837036	Micro-switch chain for 4 burners
20	012837038	Micro-switch chain for 6 burners
21	012867003	3,5 KW Chromed Burner Body
22	012817038	3,5 KW Chromed Burner Lid
23	012867004	6 KW Chromed Burner Body
24	012817040	6 KW Chromed Burner Lid
25	012807717	Grey knob for gas tap with grey label
26	012807719	Grey knob for el. thermostat with grey label
27	012807727	Grey knob for timer with grey label
43	012827006	Cast iron hotplate, Ø220mm, 2600W, 230V
44	012827007	7-position switch for hotplates, 16A, 250V
45	012827004	Power cable for Electric cookers and tops
46	012827003	Terminal box for Electric cookers and tops
48	012807085	Black knob for hotplates with grey label (since May 2016)
50	012807035	Support with roller for hinges

51	012807033	Right oven door hinge
52	012807034	Left oven door hinge
53	012807025	GN1/1 Oven grid
54	012807026	Right grid/tray holder for GN1/1 oven
55	012807027	Left grid/tray holder for GN1/1 oven
56	012805001	Fixing screw for grid/tray holders
57	012807028	Oven door seal for GN1/1 oven
58	012807036	Oven door handle
59	012805029	Complete Oven door (with handle and hinges)
60	018237011	Equipotential earthing terminal
61	018237009	Power cable for gas cookers and tops
62	018237008	Terminal box for gas cookers and tops
63	012807032	Stainless steel foot, adjustable in height, for cookers
64	002307007	Stainless steel foot, adjustable in height, for Tops
65	018237001	3000W Round heating element
66	018237012	Complete fan motor with fan for electric ovens
67	018237004	M6 Fan fixing nut
68	018237003	Stainless steel fan, 7 blades
69	018237014	Guard disk for fan motor insulation
70	018237005	Orange indicator light
71	018237006	Green indicator light
72	018237002	1 bulb thermostat (0-270°C)
73	018237007	MTS57 timer (120')
75	012807083	Black knob for el. thermostat with grey label (since May 2016)
78	012807082	Black knob for timer with grey label (since May 2016)
80	012807109	Burner for GN1/1 gas oven (complete with TC and spark plug)
81	012807101	Nozzle holder for gas oven
82	012817023	Nozzle Ø 1,60 for gas oven (Methane - all Europe)
	012817024	Nozzle Ø 1,02 for gas oven (LPG - all Europe)
83	012807105	Ignition box for GN1/1 gas oven (2 exits)
85	012807111	1-way thermostat for GN1/1 gas oven
88	012807064	Black knob for gas oven complete with adapter and grey label

Piano Gas / Gas Hob

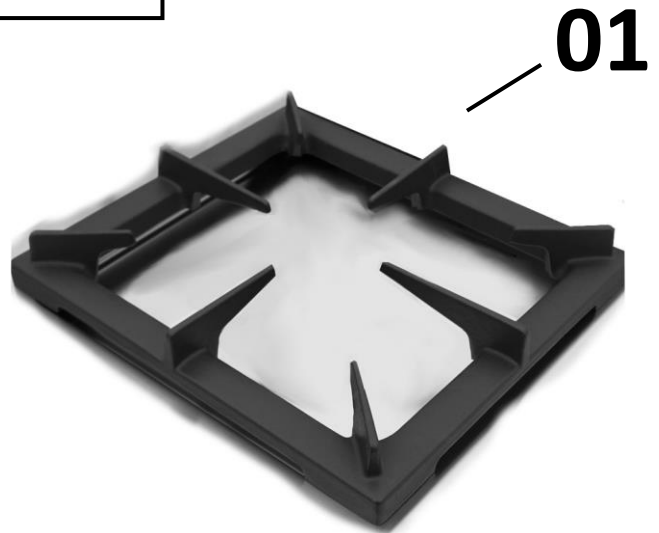



12
6KW



09



10

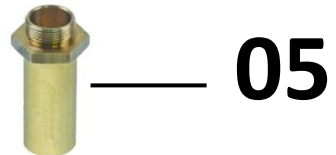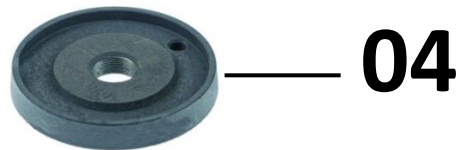

11
3,5KW




14
Grey


Piano EVO / EVO Hob



16

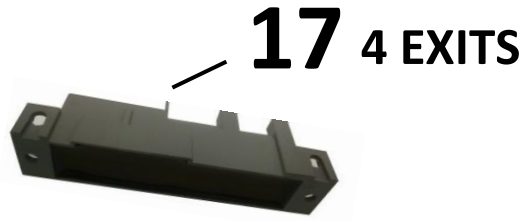

17 4 EXITS

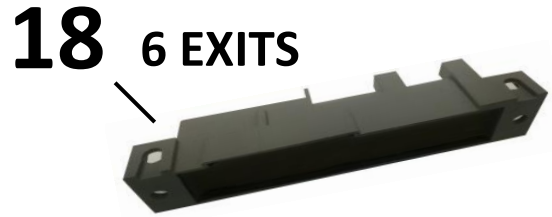

18 6 EXITS



19 4 BURNERS

20 6 BURNERS

23



21

24



22



25



26




27

Piano Piastre Elettriche / Electric Hotplate Hob


43




44

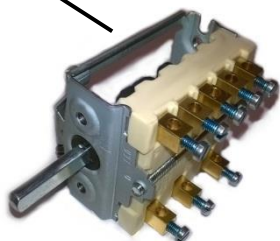

45

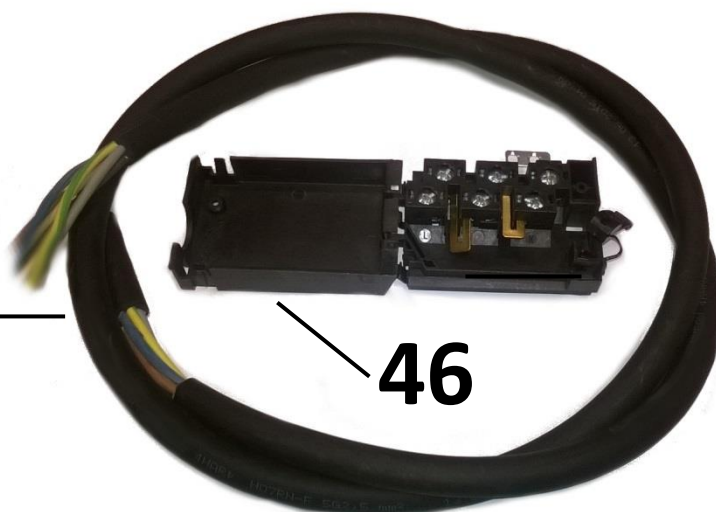

46

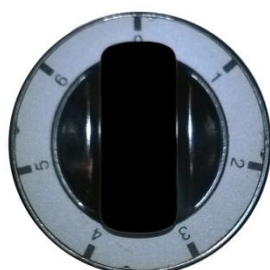

48
Grey

Accessori / Accessories




Forno Elettrico / Electric Oven

65



66

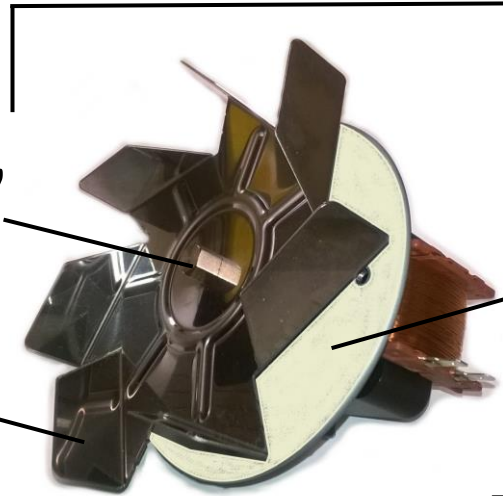

67

68

69


70 orange




71 green



72

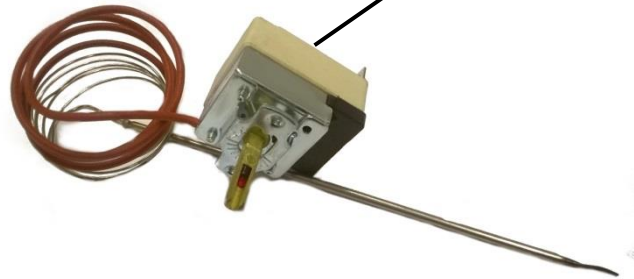

73

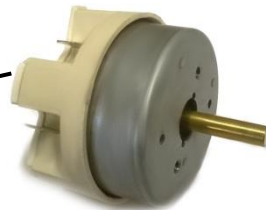



75
Grey




78
Grey



Forno Gas / Gas Oven

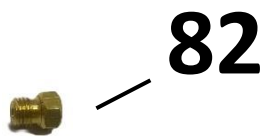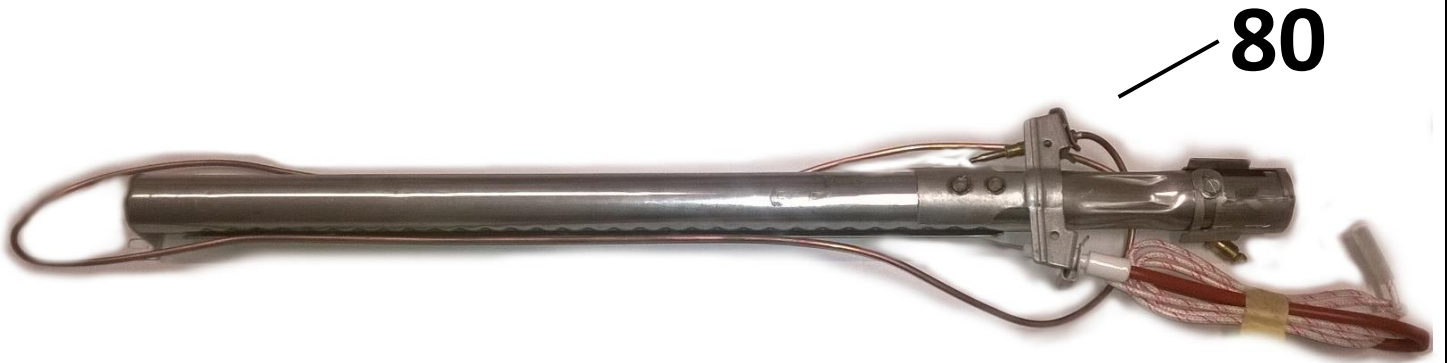

83 2 EXITS

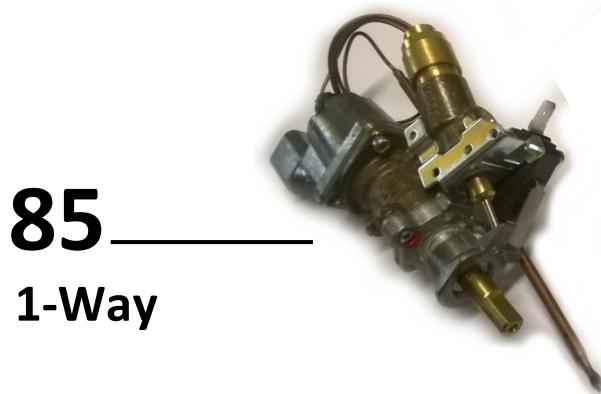

85
1-Way



88
Grey